

4 Reference

WIRING THE SYSTEM TOGETHER

TWO OR MORE RECEIVERS

Each output on the LNBF can support a single receiver. You cannot connect two receivers to the same output (for example, by using a line splitter), because the two receivers would interfere with each other during channel selection. This is a characteristic of satellite television in general, and is not a limitation of this system.

If you want to connect two or more receivers to the same satellite dish and be able to watch different channels through each receiver, you must use a dual-output LNBF. This allows you to connect each receiver to a different output, preventing interference between the receivers. In this case, during installation you must run a separate coaxial cable from each output on the LNBF to each receiver.

CABLES AND CONNECTIONS

Use either the *Phono (RCA) Audio/Video Wiring Setup Diagram* on page 4-4 or the *TV Set Out (RF or VHF) Wiring Setup Diagram* on page 4-5 as the basic plan to wire the system together. If you have more devices, or do not have all of the devices that are shown in the setup, adjust the wiring accordingly. If possible, use the setup shown in the *Phono (RCA) Audio/Video Wiring Diagram*, as using the setup shown in the *TV Set Out (RF or VHF) Wiring Diagram* will not support the best quality video on broadcast or cable channels

ATTENTION! We highly recommend the use of a surge protector device to provide some protection for your satellite and television equipment from damage by AC power, cable, telephone, or lightning surges.

WARNING! Tighten the receiver back panel coaxial cable connections only by hand. Using a wrench may over-tighten the connections, causing damage. Such damage is not covered by the Limited Warranty.

RF OR VHF CONNECTIONS (GOOD PICTURE AND SOUND)



The back panel RF or VHF connections (also called the modulator connections) provide good picture and good mono (non-stereo) sound quality. Be aware that even if you have a TV and other devices that support stereo sound, this type of connection will provide only non-stereo sound.


If you connect a cable TV box or a broadcast TV antenna to the receiver, use the back panel **TV Antenna/Cable In (RF or VHF Connection)** for the local programming signal input. Use the back panel **Phono (RCA) Audio/Video Output** connections for the output if possible, as using the **TV Set Out (RF or VHF Connection)** will not provide the best quality video on broadcast or cable channels.

This is the most simple cabling scheme, and many people prefer it because of its ease of installation and use. The RF or VHF connections require that you keep the TV tuned to either channel 3 or 4 to view satellite channels. You also need to set the back panel **Channel 3/4 Switch** to match this channel.

Note: If you connect a VCR to the receiver, you must also set both the VCR channel switch and viewing channel to this same channel. All receivers come preset to channel 3.

Satellite System User Guide

PHONO (RCA) AUDIO/VIDEO CONNECTIONS (BETTER PICTURE AND SOUND)

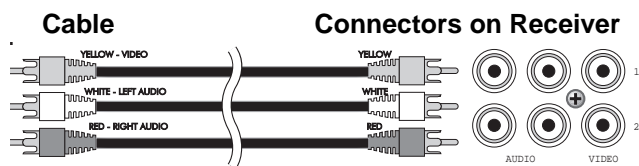

The back panel phono (RCA) audio/video connections provide better picture quality and stereo sound. The phono (RCA) audio/video cable is available as a single cable with three connectors on either end, or as three separate cables. The connectors are color-coded according to the type of signal they carry: the yellow connector carries the video signal, the white connector carries the left audio signal, and the red connector carries the right audio signal. If the TV only has one input connection for this type of audio, connect it to the right (R) phono (RCA) audio connection on the receiver.

If you use the phono (RCA) audio/video connections to connect the receiver with other devices, then depending on the type of device that you connect to the receiver you may need to use the menus displayed by each device to change the input from local broadcast TV to satellite TV. See the user guides that came with the other devices for more information.



UHF REMOTE ANTENNA

For UHF remote controls only, the receiver uses the UHF antenna to receive commands from the remote. Connect the UHF antenna here, and place it so it does not touch anything.

Note: Place the antenna vertically for maximum remote range. If necessary for space you can place the antenna horizontally, but this will reduce the range.



ACCESSORY JACK

ACCESSORY

This connection is used to facilitate multi-dish systems and allows you to alternate between two satellite dishes.




CH 3

CH 4

CHANNEL 3/4 SWITCH

If you use the **TV Set Out (RF or VHF Connection)** to wire the receiver to a television, set this switch to the channel for the signal output. Select a channel that is not being used by a cable or local television station.

 Note: If you connect the receiver to a VCR that also uses a channel switch, set both switches to the same channel.




TV ANTENNA/CABLE IN (RF OR VHF)

Connect your broadcast TV antenna or cable TV connection here to switch between satellite programming and your local or cable TV. When the satellite receiver is turned OFF or you press the **TV/Video** button on the remote, you have access to your local TV stations from this connection.




TV SET OUT (RF OR VHF)

 The receiver sends non-stereo output through this connector. If you connect the cable or broadcast TV antenna to the receiver, you must use this to connect the TV. If you use this connection, you do not need to use the **Phono (RCA)** or **S-VIDEO** connectors. However, we recommend that you use them to support the highest quality stereo sound and video.



PHONO (RCA) VIDEO OUTPUT (COMPOSITE)

 The receiver sends composite video signals through the yellow phono (RCA) video jack to other video equipment, such as a video monitor or TV. The video equipment must be equipped with a phono (RCA) video input.



PHONO (RCA) AUDIO OUTPUT

The receiver sends stereo audio out through the red and white audio jacks to other audio equipment such as a TV, VCR, or stereo amplifier. If used, the audio equipment must be equipped with phono (RCA) audio inputs.



S VIDEO SUPER VHS VIDEO (S-VIDEO) OUTPUT (BEST PICTURE)

The receiver supports S-VIDEO, which supports the highest quality video available. If you use this back panel connection for video, you must still connect the audio using the **Phono (RCA) Audio Outputs**.



TELEPHONE JACK

Connect a telephone line with a standard RJ-11 telephone connector to the receiver here, and then connect the line to an active telephone connection.

Note: The receiver must be connected at all times to an active telephone connection. If you install two or more receivers, each receiver must be connected at all times to an active telephone connection.



SATELLITE IN


Connect the coaxial cable from the satellite dish to the receiver using this connection.

Satellite System User Guide

WIRING SETUP DIAGRAMS


PHONO (RCA) AUDIO/VIDEO WIRING SETUP DIAGRAM

Note: The off-air television antenna shown in the following diagram is optional.

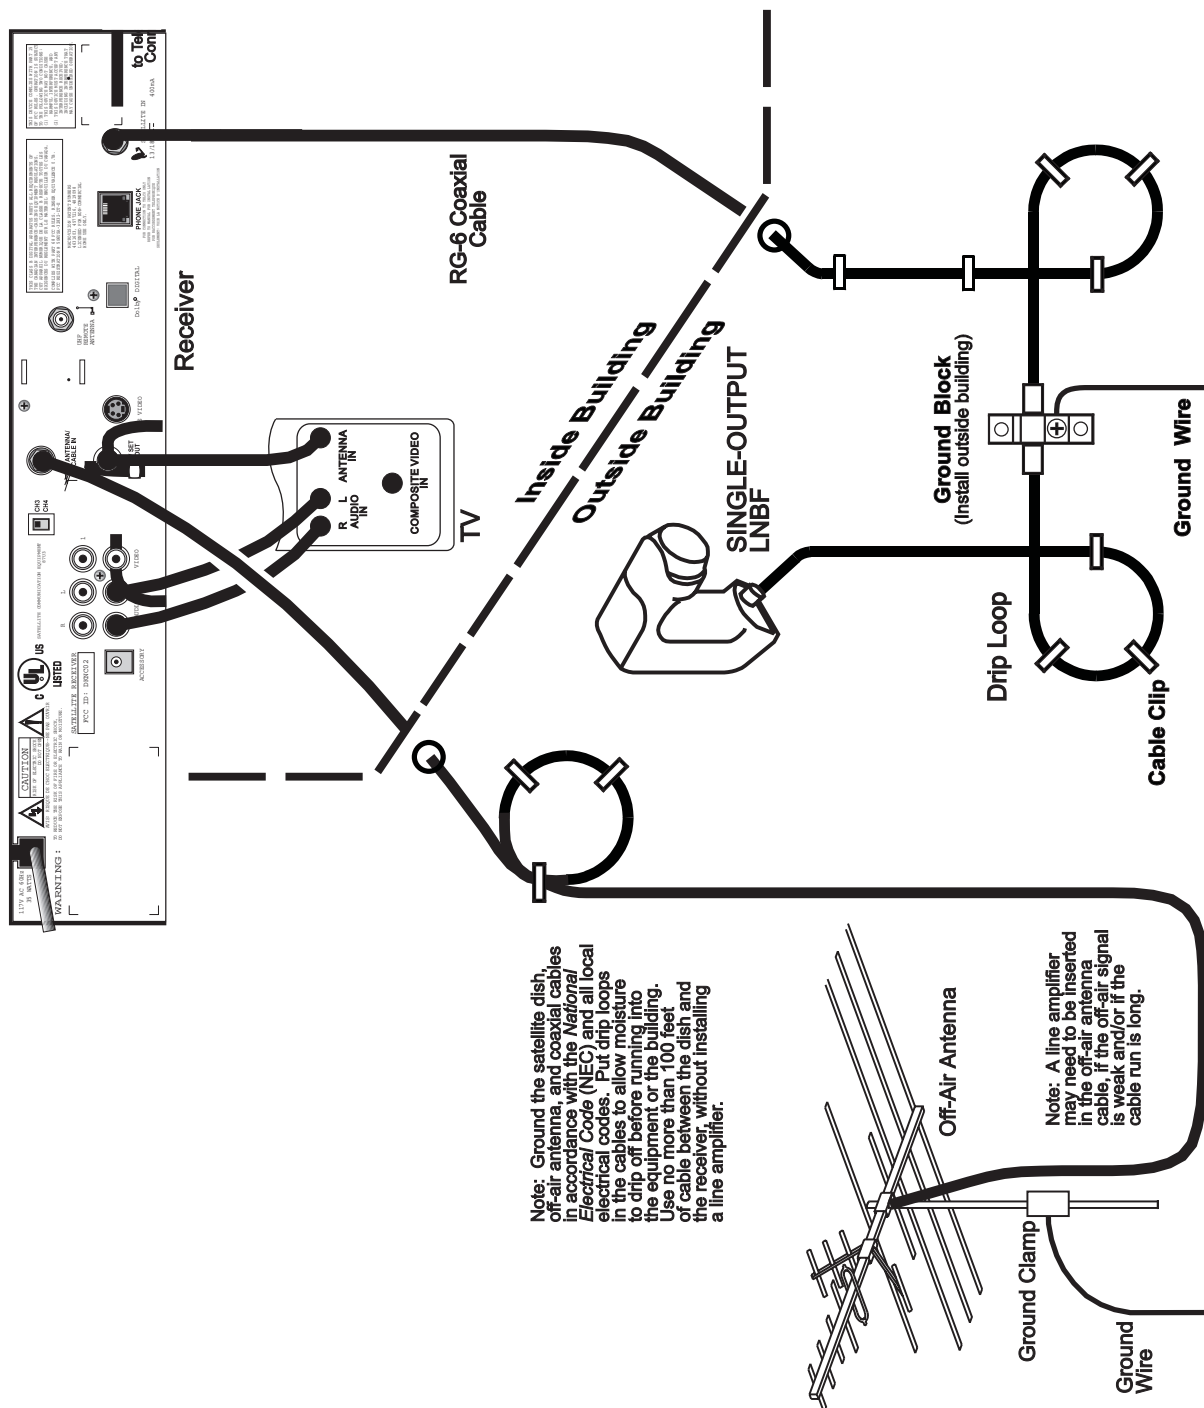


TV SET OUT (RF OR VHF) WIRING SETUP DIAGRAM

Note: The off-air television antenna shown in the following diagram is optional.

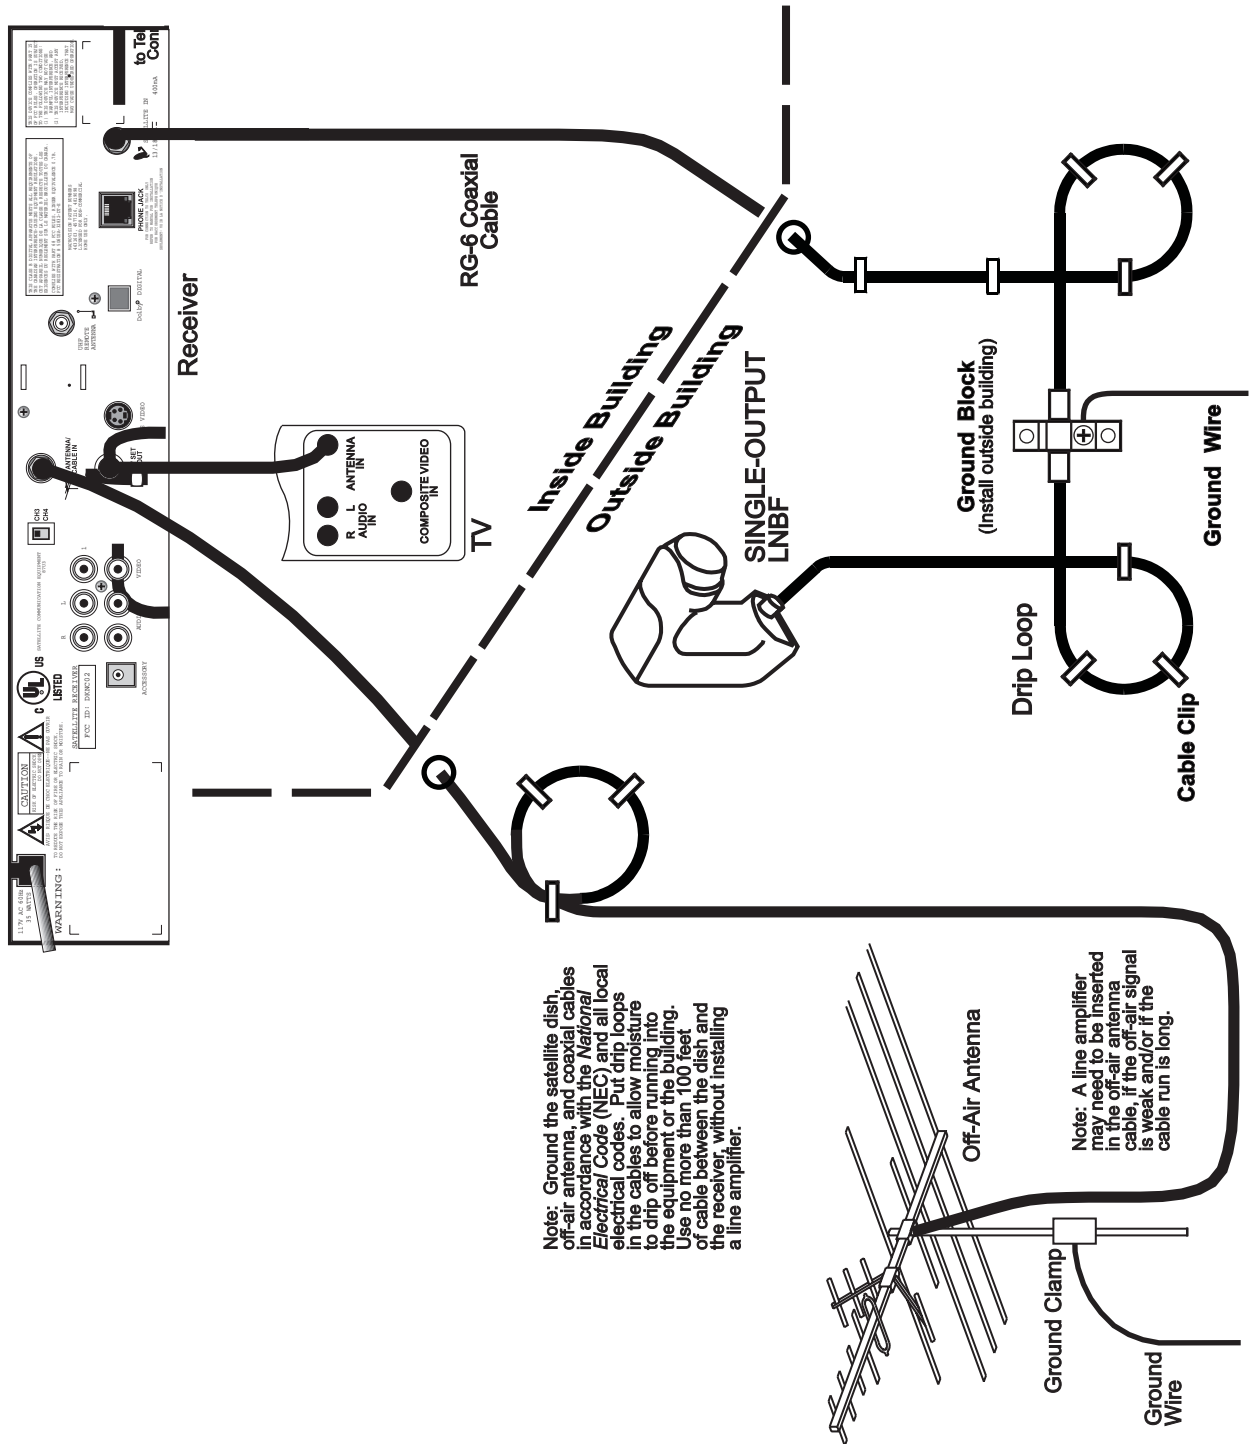

Satellite System User Guide

RECEIVER WITH VCR WIRING SETUP DIAGRAM (RF OR VHF)

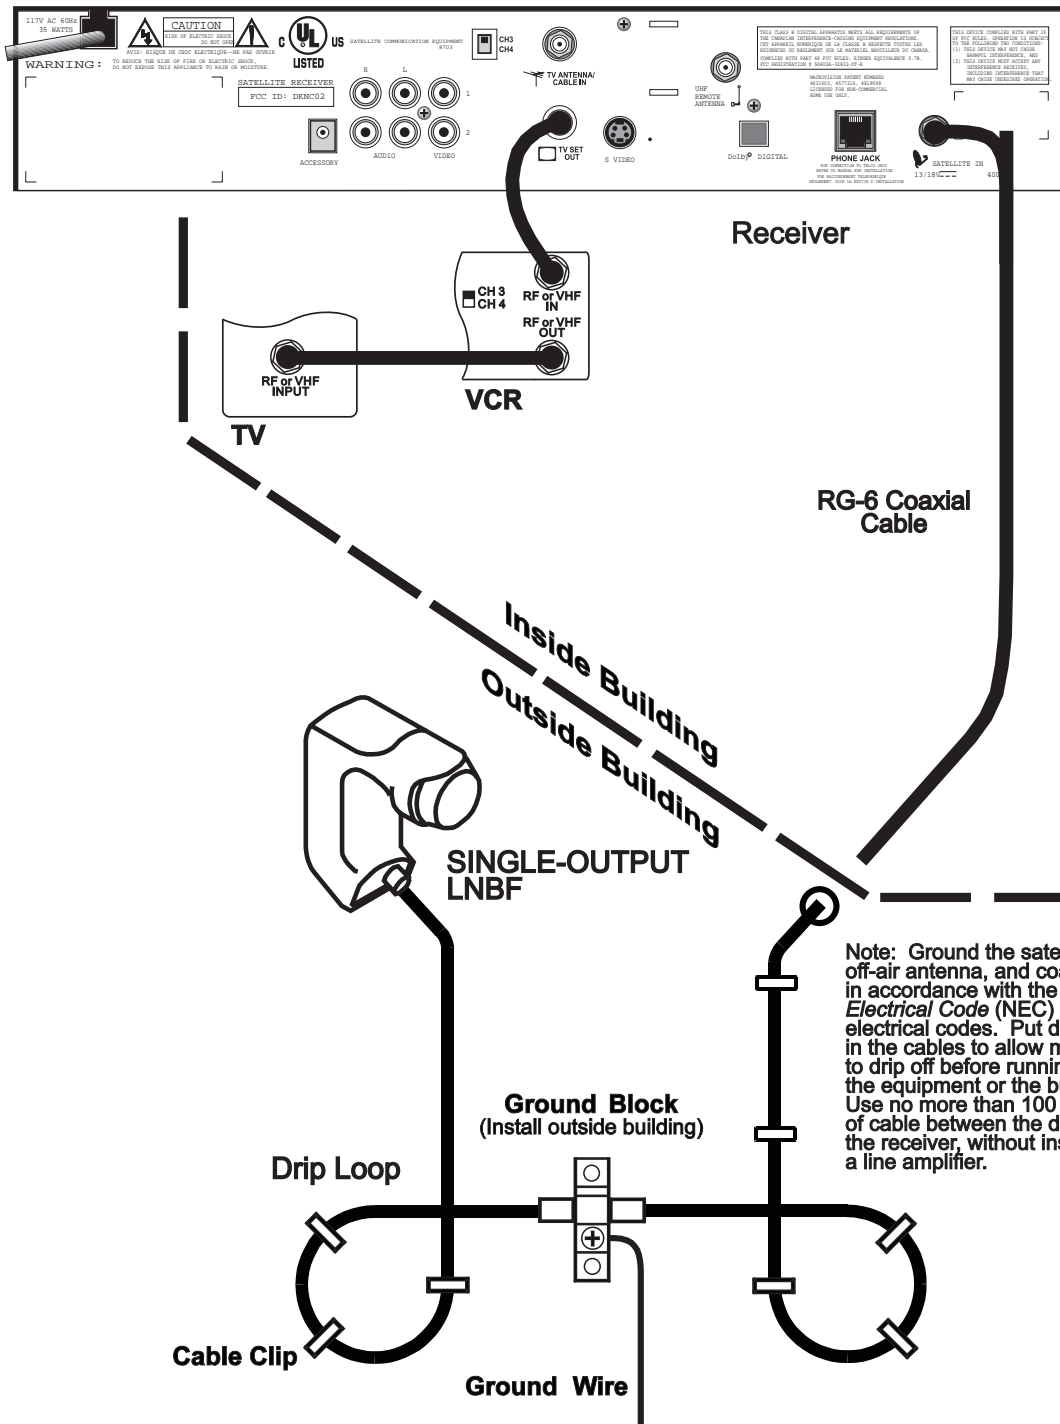

Satellite System User Guide

GLOSSARY

Blacked Out Program	A program that cannot be watched in specific locations (for example, a sports event).
Changing Channels	While watching a program, selecting channels using the remote control Up or Down arrow button or the number pad buttons or the receiver front panel Up or Down arrow button.
Critique	<p>The critique information supplied in some program information uses a four star (* = lowest) to (**** = highest) rating system. The “+” symbol is one-half star.</p> <p>Note: The critique information is supplied by the program provider, not the receiver manufacturer.</p>
Event	See Program .
IR (Infra-Red)	Some remote controls use infra-red light to transmit signals to the receiver.
Program	A TV show, movie, or pay per view program.
Program, Pay Per View	A program that you pay a fee to watch once.
Program Guide	An on-screen guide to the programs that are currently being shown, and the programs that will be shown for an extended time beyond the present. You can select current programs, and purchase pay per view events using the Program Guide .
Rating Codes	<p>The following codes have been assigned to programs to indicate content and suggested audience.</p> <p>G: <i>General Audience.</i> Suitable for young children. P: <i>Parental Guidance suggested.</i> PG-13: <i>Parental Guidance suggested.</i> Not recommended for children under the age of 13. R: <i>Restricted.</i> Not recommended for children under 17 unless accompanied by an adult. NC-17: <i>Not recommended for Children under the age of 17.</i> NR/AO: <i>Not Rated/Adult Oriented</i></p> <p>Expanded Ratings, which can be locked out by content, are as follows:</p> <p>Language: Adult language Violence: Graphic Violence Sexual Content: Sexual scenes Nudity: Nude scenes</p>
UHF	Ultra-high frequency. Some remote controls use UHF to control equipment. UHF signals can travel longer distances than Infra-Red signals and can penetrate objects making it possible to control equipment from other rooms in a building.

PROBLEMS AND SOLUTIONS TABLES

Please use these tables if you encounter problems operating the system. Look in this section for a description of the problem before calling Customer Service. Many problems arise from basic misunderstandings of how the system works, especially when one is just becoming familiar with it. These tables address many problems, usually with a simple solution for each one. To solve a particular problem:

1. Review the section in this Guide that relates to the problem.
2. If you cannot find a solution, then find the section in the following tables that relates to the problem. Look down the **What Is Happening** column until you find the problem.
3. For better understanding, read the information in the **Possible Reason** column.
4. Try each of the suggested solutions in the **What to Do** column.
5. If this does not help, call Customer Service at 1-800-333-3474, or see the home page at <http://www.dishnetwork.com> on the World Wide Web. **Note:** Before calling Customer Service with a problem, have ready the date of purchase and either your customer account number, the receiver conditional access number, or the receiver model number. Display the **Important System Information** menu to find these numbers (see *Ordering Your Programming* on page 3-1). Also, write down the contents of any error messages that the receiver displays on the television screen.

ERROR MESSAGES IN THE MENUS

What Is Happening	Possible Reason	What to Do
The receiver displays an "ERROR" message on the TV screen.	When the receiver finds a problem, it displays an ERROR message on the TV screen.	In most cases, the ERROR message explains the error. Sometimes, the ERROR message prompts you to do something. However, usually all you need to do is select the OK option on the ERROR message to clear the message from the TV screen.
ERROR message text: "The number of password entry retries has been exceeded. Please try again later."	You may try to enter the password three times. If you do not enter the correct password any of those times, then you must wait several minutes until you may try again.	Wait until several minutes have passed, and try again.
ERROR message text: "The front panel buttons are locked."	You or someone else locked the receiver front panel buttons.	You <i>must</i> use the remote control to unlock the receiver front panel buttons.
ERROR message text: "Unable to acquire signal." or "Unable to acquire program guide information."	The receiver is not receiving a strong enough signal to maintain an uninterrupted, clean picture.	Check the condition of all the coaxial cables and cable connections in the system. Check the condition of the dish mounting and aiming. If needed, contact your installer to re-aim the dish. If the system is OK, then there may be a weather-related problem with transmission of the satellite signal.
ERROR message text: "Please insert your Smart Card."	Smart card is missing or not inserted correctly.	Check that the Smart Card is fully inserted into the receiver front panel slot.
ERROR message text: "Smart Card not inserted correctly."	Smart card is inserted upside down or backwards.	Check that the Smart Card is inserted right side up, with the picture on top and the arrow facing in the correct direction.
ERROR message text: "The Smart Card currently inserted is not valid for use with this receiver."	The receiver will work <i>only</i> with the Smart Card that came with it.	Insert the Smart Card that came with the system.

Satellite System User Guide

ATTENTION: Your Smart Card does not currently have authorization to view or purchase this program. Please wait or channel up or down.	There is a problem with the Program Guide information transmitted to the receiver via the satellite signal.	You <i>cannot</i> watch the selected program, even though it is displayed in the Program Guide . Try a different program or channel.
ERROR: “Your receiver has not yet been authorized.”	The receiver has not yet been electronically linked with the Smart Card, via the satellite signal.	If you have authorized your system, wait a few minutes to see if the message is removed. If you have not authorized your system, call Customer Service for assistance.
ATTENTION: “Acquiring satellite signal.”	The receiver may have just been plugged in. If so, it is acquiring the satellite signal. The satellite dish may have moved so that it is no longer picking up the satellite signal. The coaxial cables may have loosened or have moisture inside. There may be an interruption of the satellite signal.	Wait a few minutes to see if the message is removed. Check that the Signal Strength bar in the Point Dish and Signal Strength menu is <i>green</i> and displays the word “Locked.” If not, contact your installer to re-aim the satellite dish.

USING THE REMOTE CONTROL

What Is Happening	Possible Reason	What to Do
You cannot find the remote control.	N/A	Use the receiver front panel Control Buttons to control the receiver until you find the remote. If the remote control is permanently lost or too damaged to use, call Customer Service to order a replacement.
When you press a button on the remote control, the receiver does not do what you expect.	The remote control may be missing batteries, the batteries may be incorrectly placed in the remote, or the batteries may be weak or dead.	If the batteries are missing or dead, insert fresh AAA-size batteries. If the remote has fresh batteries, check whether they are placed according to the label diagram. If not, remove them and place correctly.
When you press the remote control Power button to turn the receiver ON, the receiver front panel Power light does not light up.	You may not be able to see that the receiver Power light is on, if other lights in the room are too bright. The remote control may not be operating properly or the batteries may be weak or dead. The receiver power cord may not be plugged into a power outlet, or there may be a problem with the power.	Try other remote control buttons to see if the receiver is responding. Replace the remote batteries with fresh ones. Check that the receiver power cord is not damaged, and that the plug is inserted correctly into the outlet.
You use infrared (IR) remote control extenders (called “pyramids”). Other electronic devices exhibit ultra-high frequency (UHF) interference.	The extenders use UHF signals to transmit signals from one room of the building to another. These signals may be causing the interference.	Temporarily stop using the extenders, to see whether this eliminates the interference. If the extenders are the source of the interference, you will have to avoid using them whenever you do not want interference with other devices that use UHF. This is because UHF signals have a long range and go through walls and other solid objects.
You use infrared (IR) remote control extenders (called “pyramids”). The IR remote control extenders do not seem to work.	The IR sensor on the extender that receives the remote control signals may not be facing the remote control. The IR cable on the extender that sends the signal to the receiver may not be right in front of the IR sensor on the receiver front panel.	Make sure that the extender that receives the signal from the remote control is facing the right way, so that the IR sensor can receive the remote control signals. Make sure that the IR cable on the extender that sends the signal to the receiver is right in front of the IR sensor on the receiver front panel, so that the receiver IR sensor can receive the signals. If doing the above does not solve the problem, contact the manufacturer of the extenders for assistance.

HEARING PROGRAM SOUND

What Is Happening	Possible Reason	What to Do
The receiver front panel Power light is on and there is a good picture on the TV set, but you do not hear any sound.	You may have muted the sound, or set the volume so low that you cannot hear it. The audio connections may not be properly connected.	Check the volume level on the TV or audio equipment. Turn off the mute or turn up the volume, as required. Check the audio connectors and cables from the receiver to the TV or the sound system you are using. Check the TV speakers or the sound system you are using.
You hear a foreign language with a program.	You may have programmed the receiver to select an alternate audio language.	Use the System Setup menu to open the Alternate Audio Language menu, where you can select the language you prefer.

WATCHING A PROGRAM

What Is Happening	Possible Reason	What to Do
The receiver front panel Power light is on, but the TV image: is black (no picture), is frozen, has breakups, has "snow," or shows small squares of various colors.	The TV set may not be working properly. If the TV and the receiver are working properly, there may be interference with the satellite signal. The TV may be wired to the wrong input.	Make sure that the TV set is plugged into an electrical outlet. Make sure the outlet has electrical power. Make sure that the TV is turned on. If the receiver is connected to the TV using only the RF or VHF connections, make sure that the TV is tuned to channel 3 or 4 (whichever works best in your area) and that the receiver back panel Channel 3/4 Switch is set to the same channel as the TV. Make sure that the TV brightness and contrast are adjusted correctly. Make sure that the TV is connected properly to the receiver. Check that the system has been installed correctly. Make sure that all required coaxial cables are in place, and check that all cable connectors are firmly connected. Make sure that the satellite dish is aimed at the satellite. Check the strength of the signal using the Point Dish and Signal Strength menu. Consult your installer to re-aim the dish, if necessary, to obtain the maximum possible signal strength. Note the local weather conditions. Heavy rain, snow, or cloud cover may be interfering with transmission of the satellite signal. Remove any snow or other debris which may have collected on the satellite dish. Set the TV to SVIDEO or VIDEO input.
The receiver front panel Power light is on, and there is a picture on the TV screen, but the picture: has sparkles or is grainy, has a herringbone pattern, lacks color or vertical hold, or wobbles, or looks "washed out" or fuzzy.	The TV set may not be working properly. If the receiver is connected to the TV using only the RF or VHF connections, there may be a strong local broadcast on the same channel, or a channel adjacent to the one to which the TV is tuned. There may be interference from other nearby electrical devices (such as cellular telephones, computers, microwave ovens, radios, stereos, or TVs). The satellite dish may have moved, so that it no longer picks up the satellite signal.	Make sure that the TV brightness and contrast are adjusted correctly, and that the TV is working properly. Make sure that the TV is connected properly to the receiver. Check other nearby electrical devices as possible sources of interference. Check that all required coaxial cables are in place. Check for moisture or water leaking in all connections. Dry them out if needed, then seal them with coaxial cable sealant. Check the dish-to-receiver cable run length; if it is over 100 feet, call your dealer or professional installer. Make sure that the satellite dish is aimed at the satellite. Check the strength of the signal using the Point Dish and Signal Strength menu. If necessary, contact your installer to re-aim the dish to obtain the maximum possible signal strength. Check the dish mount, tightening the bolts if needed.
A "black box" fills almost all of the TV screen.	You may have activated the Close Caption feature on the TV, and put that feature into Text mode.	Using the TV remote control and/or menus displayed by the TV (<i>not</i> the receiver remote control or the menus displayed by the receiver), deactivate the Close Caption feature.
The TV screen is all blue.	You may have connected the receiver to an incorrect input connection on the TV for the signal output from the receiver.	Check your TV owner's manual for the correct TV input connection to use for the signal output from the receiver.

USING THE MENUS

What Is Happening	Possible Reason	What to Do
You were using a menu, and it suddenly closed, taking you back to the program you were watching.	The menus have a time-out feature that closes any menu after several minutes of no activity. This will discard any changes you have made, but otherwise does no harm to the receiver.	Start over again.

Satellite System User Guide

USING THE PROGRAM GUIDE OR THE BROWSE BANNER

What Is Happening	Possible Reason	What to Do
You try to display future programs in the Program Guide or Browse Banner , but find you cannot.	The Program Guide and Browse Banner can display programs scheduled for an extended, but <i>not</i> unlimited time beyond the present.	Try displaying the Program Guide again later. By that time, it may show programs for the time and date you want.
You try to display past programs (programs that have ended) in the Program Guide or Browse Banner , but find you cannot.	The Program Guide and Browse Banner can display <i>only</i> programs that have <i>not</i> yet ended. These features <i>cannot</i> display a time earlier than the present.	Contact the program providers for information on past programs.
When you are using the Program Guide or Browse Banner , some channels are missing.	You have activated a Favorites List other than the list named ALL CHAN .	You can change the active Favorites List while using the Program Guide , by pressing the remote control Guide button. You can choose another custom Favorites List or the ALL CHAN list, which includes all the channels.

CHANGING CHANNELS

What Is Happening	Possible Reason	What to Do
You enter a desired channel number. The channel changes, but the new channel is not exactly the channel you entered. You are scanning up or down through the channels, and the receiver is skipping channels that you know you have purchased.	You may have made a mistake entering the channel number, or the channel number you entered may be invalid. If so, the channel displayed is the closest possible to the channel you entered. If you were watching a program and entered the number for a channel that you have not purchased, the receiver will change to the unpurchased program and allow a purchase or display a message. If a Favorites List other than ALL CHAN is active, the receiver will skip channels not on the active list.	Carefully retry entering the channel number you want. Press the remote control Recall button to return to the previous channel number. Select ALL CHAN as the active Favorites List.

READING ELECTRONIC MAIL

What Is Happening	Possible Reason	What to Do
You read messages before that now are missing.	The receiver may have deleted some old messages because it ran out of space for new messages.	Delete messages as soon as you have read them, unless they are important enough to save.
When you display information about a program, the display includes an envelope.	The receiver has received mail.	Read the mail and the envelope will be removed.

USING FAVORITES LISTS

What Is Happening	Possible Reason	What to Do
You try to change the ALL CHAN list. The receiver displays an ERROR message.	The receiver will not allow you to change the ALL CHAN list.	Choose another list to change.
You try to make an empty Favorites List active. The receiver highlights the Modify List option.	The receiver will not allow you to activate an empty list.	Choose another list to use, or add at least one channel to the empty list.

You try to add a channel to a Favorites List. The receiver displays an ERROR message.	The list is full (that is, it has the maximum number of channels allowed in it).	You <i>must</i> delete a channel from the list to make room for each new channel.
---------------------------------------------------------------------------------------	----------------------------------------------------------------------------------	-----------------------------------------------------------------------------------

SETTING AND USING SECURITY LOCKS

What Is Happening	Possible Reason	What to Do
You set a lock (<i>for example</i> , a lock on programs by ratings), but the lock does not take effect.	You have not locked the receiver.	You <i>must</i> lock the receiver for any lock to take effect.
You forgot your password, so that you are unable to unlock the receiver.	You may not have written down the password, to keep it in a safe place.	Call Customer Service. You <i>must</i> provide the following information: (1) your name; (2) your address; (3) your telephone number; (4) the receiver serial identification number; and (5) your Customer Service Personal Identification Number (PIN), if you use one.

ORDERING A PAY PER VIEW PROGRAM

What Is Happening	Possible Reason	What to Do
Someone orders a pay per view program without your permission.	You may have been away from the receiver, and someone else used it.	Lock the receiver to prevent unauthorized pay per view purchases. Note: You do <i>not</i> have to set any locks to lock pay per view purchases. Locking the receiver <i>automatically</i> locks pay per view purchases. <i>Remember that you are responsible for all pay per view purchases, whether or not you authorize such purchases.</i> If you lock the receiver, then anyone who wants to order a pay per view program <i>must</i> enter the password.
You are not able to order a pay per view program.	The receiver may not be connected to an active telephone line. The Smart Card credit limit may have been exceeded.	The receiver <i>must</i> be connected at <i>all</i> times to an active telephone connection. If you install two or more receivers, <i>each</i> receiver <i>must</i> be connected at <i>all</i> times to an active telephone connection. Call Customer Service.
You find that you are not able to cancel a pay per view program.	You ordered a pay per view program, and then decided not to watch it.	You <i>cannot</i> cancel an order for a pay per view program, whether it was just ordered or ordered previously.
Your setup includes more than one receiver. You order a pay per view program, but it does not appear via all of the receivers.	You ordered a pay per view program, and want it to be available via all the receivers in your setup.	If you use more than one receiver, you <i>must</i> order a pay per view program for each receiver and you will be billed for <i>each</i> order.

PERFORMING DIAGNOSTIC TESTS

What Is Happening	Possible Reason	What to Do
You are doing a Front Panel or Remote Control Diagnostic Test, and the receiver turns OFF.	You pressed the remote control Power button or the receiver front panel Power button.	Turn the receiver back ON, and use the on-screen menus to return to the Diagnostics menu. You can now resume the test, but remember not to press the remote control Power button or the receiver front panel Power button.
You are doing a Front Panel Diagnostic Test, and the receiver displays a failure message.	The front panel buttons are not working correctly. Note: The front panel button lock has no effect on this test.	Call Customer Service for assistance.
You are doing a Remote Control Diagnostic Test, and the receiver displays the Diagnostics menu.	You pressed the remote control Cancel button.	Pressing the remote control Cancel button returns the receiver to the Diagnostics menu. Select the Remote Control option to resume the test, but remember not to press the remote control Cancel button.

Satellite System User Guide

You are doing a Remote Control Diagnostic Test, and the receiver displays a failure message.	The remote control may be missing batteries, the batteries may be incorrectly placed in the remote, or the batteries may be weak or dead. The remote control may be damaged or defective.	If the batteries are missing or dead, insert fresh AAA-size batteries. If the remote is damaged or defective, call Customer Service for assistance.
You are doing a Dish Signal Diagnostic Test, and the receiver displays a failure message.	The satellite dish may have been moved, so that it no longer receives the satellite signal. Coaxial cables may have loosened, or have moisture inside. There may be interference with the satellite signal. The dish may be full of snow or debris.	Contact your installer to re-aim the satellite dish for the maximum signal strength. Check the dish mount, tightening bolts if needed. Check that all coaxial cables are firmly connected and dry. A variety of weather (in particular, heavy rain, snow, or cloud cover) may interrupt the satellite signal. Check whether the dish is full of snow or debris, and clean it out if necessary. Call Customer Service for assistance.
You are doing a Telephone Connection Diagnostic Test, and the receiver displays a failure message.	The receiver cannot get a dial tone through the telephone connection.	Check the receiver back panel Telephone Jack connection and the telephone line. Make sure that the telephone line is connected to an active telephone connection. Make sure that the receiver is set up for the type of telephone system that you use. Make sure that no one else is using the telephone line while you do the test. Check the telephone line for a dial tone; if there is no dial tone, call the local telephone company for assistance.
You are doing a Main Unit Diagnostic Test, and the receiver displays a failure message.	The receiver may have been damaged or be defective.	Call Customer Service for assistance.

USING THE TELEPHONE FOR VOICE/DATA/FAX

What Is Happening	Possible Reason	What to Do
During a telephone call, you hear "clicks."	The receiver may have tried to call Customer Service in order to send pay per view purchase information. When the receiver found that the telephone was busy, it automatically disconnected.	You do not have to do anything.
You pick up the telephone to make a call, but you do not hear a dial tone.	The receiver was calling Customer Service in order to send pay per view information. When the receiver found that the telephone was picked up, it automatically disconnected.	Press the telephone receiver button to hang up. Release the button to get a dial tone.
Your computer or FAX machine tries to send a FAX or modem transmission, but fails.	The receiver was calling Customer Service in order to send pay per view information. When the receiver found that a call was being made on the telephone, it automatically disconnected. The FAX or modem found that there was no dial tone, and cancelled the transmission.	Resend the FAX or modem transmission.
Your computer or FAX machine was receiving a FAX or modem transmission, but an error occurred.	The receiver may have tried to call Customer Service in order to send pay per view purchase information during the FAX or mode call. When the receiver found that the telephone was busy, it automatically disconnected. This generated "clicks" that caused an error in the FAX or modem transmission.	Have the sender resend the FAX or modem transmission.

DEVICE CODES FOR PROGRAMMING THE REMOTE

These tables contain the device codes for programming the remote to control other devices. Every attempt has been made to include all device codes. If your device is not listed or the codes do not work, the remote may not control your device.

Note: For some receivers, using the code 222 in the *Programming the Remote to Control Other Devices* procedure in **SAT**, **TV**, or **VCR** mode programs the remote to control the receiver sound volume.

TELEVISIONS

Akai	032, 070, 073
Alba	113
A-Mark	120
Amstrad	033
Anam	009, 021, 041, 120, 121, 191, 198
AOC	005, 006, 019, 020, 120, 195, 212
Archer	120
Audiovox	120
Bauer	111
Broksonic	062, 191
Candle	006, 022, 023, 025, 191, 195, 208
Capehart	019, 195
Circuit City	195
Citizen	006, 016, 022, 023, 024, 025, 026, 191, 208
Colortyme	073, 195
Concerto	023
Contec	027, 028, 041, 091, 191
Craig	021, 041, 191, 194
Crown	026
Curtis Mathes	006, 016, 026, 073, 203, 208
CXC	041, 191
Daewoo	005, 024, 026, 029, 030, 031, 032, 198, 212, 219
Daytron	026, 195
Dixi	032, 088, 120
Dumont	195
Electrohome	026, 073, 195, 209, 213
Elta	032
Emerson	026, 027, 028, 033, 034, 035, 037, 038, 039, 040, 041, 073, 122, 191, 192, 195, 196, 220
Envision	006, 073, 212
Etron	032
Fisher	042, 090
Formenti	111
Fortress	073, 105
Fujitsu	034, 194
Funai	034, 041, 191, 194
Futuretech	041, 191, 194
General Electric (GE)	003, 008, 009, 015, 040, 043, 044, 130, 191, 195, 198, 201, 214, 215, 216
Genexxa	113
Goldstar	005, 023, 026, 045, 046, 073, 088, 193, 195, 212
Granada	195
Grand	195
Grundig	047
Hallmark	195
Hinari	034
Hitachi	023, 026, 048, 049, 050, 051, 052, 053, 054, 055, 085, 097, 126, 202, 213, 218
Infinity	066
JBL	066
JC Penney	201, 212, 214
Jensen	056, 073
JVC	057, 058, 059, 060
Kawasho	061, 212
Kenwood	006, 073, 212
Kloss	022, 110, 198

KTV	026, 039, 040, 041, 191, 196, 212
Lloyds	195
Lloytron	026
Loewe	088
Logik	018
Luxman	023
LXI	003, 063, 066, 090, 095, 117, 125, 201
Magnasonic	073
Magnavox	006, 020, 025, 064, 065, 066, 067, 068, 069, 073, 110, 210, 212
Marantz	006, 066, 073, 088, 212
Matsui	032, 109
Megatron	195
Memorex	018, 032, 090, 195
MGA	004, 005, 006, 071, 073, 195
Mitsubishi	004, 005, 070, 071, 072, 097, 123, 195, 205, 207, 212
MTC	005, 006, 016, 023, 031, 195, 212
NAD	002, 117, 195
National	009, 021, 197, 198
National Quenties	197
NEC	005, 006, 007, 017, 023, 073, 127, 212
Nikkai	112, 113, 118
Nikko	195
Normande	051, 217
Novabeam	198
Nyon	201
Onwa	041, 191
Optonica	105, 107
Orion	194
Osaki	112
Osume	091
Panasonic	008, 009, 010, 011, 012, 066, 074, 075, 197, 198, 200, 206, 214, 216
Penney	003, 005, 006, 014, 016, 026, 043, 096
Philco	005, 006, 025, 064, 065, 068, 073, 110, 212
Philips	066, 088
Pioneer	002, 048, 051, 076, 198, 208
Portland	005, 026, 212
Proton	013, 019, 026, 073, 085, 124, 195
Pulsar	001
Quasar	008, 009, 077, 200
Radio Shack	014, 026, 041, 107, 112, 191, 198
RCA	003, 005, 014, 015, 048, 079, 080, 081, 082, 083, 084, 085, 086, 087, 125, 133, 134, 191, 198, 201, 208, 214, 215, 216
Realistic	090
Saba	051
Saisho	032, 033, 109
Sampo	006, 019, 198, 212
Samsung	005, 006, 016, 023, 026, 032, 088, 112, 195, 204, 212, 221
Sanyo	042, 089, 090, 091, 092, 109
SBR	088
Schneider	088

Scott	026, 034, 037, 041, 093, 196, 191, 196, 201
Sears	003, 023, 034, 042, 063, 089, 090, 094, 095, 096, 097, 098, 099, 100, 101, 102, 103, 104, 117, 195, 203
Seimitsu	195
Sharp	026, 085, 091, 105, 106, 107, 108, 128, 129
Siemens	091
Signature	018
Silver	073
Simpson	073
Solavox	112
Sony	000, 109, 119, 122
Soundesign	025, 041, 191, 195
Spectricon	020, 120
Squareview	194
SSS	005, 041, 073, 191, 212
Supra	023
Supre-Macy	022
Sylvania	006, 025, 064, 065, 066, 068, 073, 100, 110, 111, 212
Symphonic	132, 192, 194
Tandy	105, 113
Tatung	009, 198
Technics	008
Techwood	023, 073
Teknika	004, 005, 016, 018, 022, 023, 024, 025, 026, 034, 041, 114, 115, 191, 212
Teleavia	051
Telefunken	051
Teletech	032
Tera	013
Thomas	195
Thompson	209
Thomson	051, 116
TMK	023, 073, 195
Toshiba	016, 090, 096, 117, 118, 131
Tosonic	028
Totevision	026
Toyomenko	195
Universal	043
Vector Research	006
Victor	057
Video Concepts	070, 191
Vidtech	005, 195, 212
Viking	022
Wards	005, 006, 015, 018, 034, 043, 064, 065, 067, 068, 107, 119, 212, 214, 215
Yamaha	005, 006, 212
York	195
Zenith	001, 018, 193
Zonda	120

Satellite System User Guide

VCRs

Aiwa	088, 094, 122, 123, 124
Akai	013, 014, 015, 016, 017, 018, 019, 020, 068
Alba	046
Amstrad	088
ASA	065
Audio Dynamics	100
Broksonic	059
Bush	089
Candle	080, 092, 093
Canon	042, 053, 054
Capehart	043, 046
Citizen	091, 092, 093
Craig	091, 108
Croslex	053
Curtis Mathes	054, 092, 105
Daewoo	034, 046, 047, 093, 126, 127
Daytron	046
DBX	100
Dumont	049
Dynatch	088
Electrohome	109
Emerson	005, 006, 007, 008, 009, 010, 011, 012, 059, 068, 088, 090, 109, 118
Finlandia	049
Finlux	049, 065, 088
Fisher	048, 049, 084, 108, 110
Funai	088
General Electric (GE)	050, 051, 052, 054, 072, 091, 105
Goldstar	030, 055, 092, 112, 113
Goodmans	085, 089
Go Video	120
Granada	049, 081
Grundig	065
Harman Kardon	030, 069
Hinari	089
Hitachi	036, 037, 038, 039, 040, 041, 053, 088, 096, 097
Instant Replay	053
ITT	018
JC Penney	030, 054, 091, 100, 101
Jensen	060
JVC	061, 062, 063, 064, 092, 100, 101
Kenwood	062, 081, 092, 100, 101
Lloyd	088
Logik	089
Luxor	018
Magnavox	027, 053, 054, 056, 065, 111
Marantz	030, 054, 065, 085, 092, 100, 101, 103
MEI	054
Memorex	033, 049, 054, 066, 081, 085, 088, 108
MGA	067, 068, 109
Mitsubishi	062, 067, 068, 069, 070, 071, 109
MTC	044, 080, 088
Multitech	088, 089, 091
NAD	073
NEC	030, 031, 032, 062, 092, 099, 100, 101, 102, 103, 104
Olympic	053
Optonica	085
Orion	006, 007, 129
Panasonic	021, 022, 023, 024, 026, 053, 054, 098, 114, 128

Penney	054, 080
Pentax	037, 092
Perdio	088
Philco	053, 054, 111
Philips	053, 054, 065, 085
Pioneer	053, 062, 073, 074, 075, 076, 100
Portland	046, 093
Proscan	105
Pulsar	033
Quartz	081
Quasar	053, 054, 077, 078
Radio Shack	107, 108, 109, 110
RCA	025, 026, 027, 028, 029, 037, 053, 056, 091, 105, 106, 115, 130, 131
Realistic	049, 054, 080, 081, 084, 085, 088
Ricoh	002
Saisho	006, 007
Salora	067, 081
Samsung	017, 034, 079, 080, 091
Sansui	032, 044, 062, 100, 121
Sanyo	049, 081, 082, 083, 108
SBR	065
Schneider	089
Scott	008, 059, 090
Sears	048, 049, 081, 084, 108, 110
Sentra	046
Sharp	085, 107, 109, 125
Shintom	089
Sony	000, 001, 002, 003, 004
Sylvania	053, 054, 056, 067, 088, 111
Symphonic	088
Tandy	088
Tashiko	088
Tatung	086, 101
Teac	088, 101
Technics	053, 054
Teknika	054, 087, 088
TMK	006
Toshiba	034, 035, 067, 090
Totevision	080, 091
Unitech	080
Vector Research	030, 100
Victor	061, 062, 100
Video Concepts	068, 100
Videosonic	091
Wards	027, 054, 080, 085, 088, 089, 090, 091, 107, 108, 109
Yamaha	030, 092, 100, 101
Zenith	001, 002, 033

TUNERS/AMPLIFIERS

Aiwa	0156, 0168, 0180, 0184
Akai	0167
Carver	0153, 0172
Denon	0174
Fisher	0153, 0172
GE	0165
Goldstar	0177
JVC	0157, 0183
Kenwood	0176
Luxman	0181
LXI	0165
Marantz	0151
Memorex	0175
NAD	0169
Nakamichi	0171
Onkyo	0160, 0162, 0178
Optimus	0164
Panasonic	0152
Pioneer	0158, 0175, 0179
Proton	0154
Quasar	0152
RCA	0155
Realistic	0165, 0166
Scott	0159
Sherwood	0170
Sony	0173, 0180
Symphonic	0166
Technics	0152
Victor	0157
Yamaha	0163, 0182

CABLE BOXES

Eastern	0149
GI/Tocom	0140
Hamlin	0147, 0148
Jerrold	0135, 0136, 0137, 0149
Memorex	0137
Oak	0146
Panasonic	0137, 0144, 0145
Paragon	0137
Pioneer	0142, 0143
Regency	0149
Scientific Atlanta	0138, 0139, 0147, 0148, 0150
Zenith	0141