

Warning and Attention Symbols

 
You *must* be aware of safety when you install and use this system. This *User Guide* provides various procedures. If you do some of these procedures carelessly, you could *injure* or *kill* yourself or damage equipment or property. Some other procedures require special attention.



The **WARNING!** symbol means that if you are not careful, You could *injure* or *kill* yourself, or You could damage equipment or property.



The **ATTENTION!** symbol means you should pay special attention to: Important instructions for using the system, or Important instructions for maintaining the system.



The **Class II** symbol alerts qualified service personnel to use only identical replacement parts in this apparatus.

For Your Safety



Do *not* try to open the case of the receiver. There is risk of electrical shock, which may cause damage to the receiver and/or personal injury or death to you. There are *no* user-serviceable parts inside the receiver. Opening the receiver case or making unauthorized changes will void the warranty.



To reduce the risk of fire or electric shock, do *not* expose this appliance to rain or moisture.

Important Software Notice

As with all software controlled products, unexpected behavior could arise if the user tries to perform operations in a non-routine manner. This product, like almost any other high tech product, is subject to bugs and hence EchoStar CANNOT AND DOES NOT GUARANTEE OR WARRANT THAT ALL FEATURES, SUCH AS PARENTAL CONTROL, WILL WORK AS INTENDED UNDER ALL CIRCUMSTANCES. EchoStar endeavors to improve such conditions and will periodically download improvements.

In compliance with the terms of the GNU Public License (GPL), EchoStar is making some source code available to the public to download from www.echostar.com.

Equipment and Software Covered by this User's Guide

This *User Guide* covers the ViP 622 DVR receiver and software model ViP622. This *Guide* may cover other devices, not listed here.

Copyright Notice

Copyright © 2005 EchoStar Technologies Corporation, Englewood, Colorado 80112. All rights reserved.

The information in this *User Guide* may change without notice. We may issue revisions to tell you about such changes.

Please send comments or questions about this *User Guide* to: *Technical Publications, EchoStar Technologies Corporation, 94 Inverness Terrace East, Englewood, Colorado 80112.*

Part Number: 143783

Printed in the United States of America.

DISH Network is a registered trademark of EchoStar Satellite L.L.C. For information about DISH Network, please visit our website at www.dishnetwork.com.

We acknowledge all product names, trade names, or corporate names we mention in this *User Guide* to be the proprietary property of the registered owners.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. © 1992-1997 Dolby Laboratories. All rights reserved.



Table of Contents

Important Safety Precautions v

1 Introduction

WELCOME	2
HOW TO USE THIS GUIDE	2
ABOUT YOUR DISH NETWORK ACCOUNT	4
WATCHING TV NOW	5
ADDITIONAL SERVICES	7
ABOUT SATELLITE TV RECEPTION	7
WHY CONNECT TO A PHONE LINE	8
MOVING ON-SCREEN LOGO	8

2 Receiver and Remote Controls

SATELLITE RECEIVER OVERVIEW	12
DUAL AND SINGLE MODES	13
REMOTE CONTROL	16
SATELLITE RECEIVER FRONT PANEL	21
SATELLITE RECEIVER BACK PANEL	21
USING THE MENUS	22
USING TEXT FIELDS	24

3	Finding Programs to Watch	
	CHANGING CHANNELS	28
	USING THE PROGRAM GUIDE	28
	USING THE BROWSE BANNER	30
	USING THEMES AND SEARCH	31
	USING PICTURE-IN-PICTURE	33
4	Pay Per Programs	
	PAY-PER-VIEW	36
	DISH ON DEMAND	36
5	Favorites Lists	
	WHAT ARE FAVORITES LISTS?	40
	CREATING OR CHANGING FAVORITES LISTS	41
	NAMING FAVORITES LISTS	41
	USING FAVORITES LISTS	41
6	Locks	
	WHAT ARE LOCKS?	44
	CREATING OR CHANGING A PASSWORD	45
	LOCKING AND UNLOCKING YOUR RECEIVER	45
	CREATING OR CHANGING RATINGS LOCKS	46
	CREATING OR CHANGING CHANNEL LOCKS	47
	LOCKING OR UNLOCKING PAY-PER-VIEW CHANNELS	47
	HIDING ADULT CONTENT OR LOCKED CHANNELS	48
	LOCKING OR UNLOCKING THE FRONT PANEL	49
7	Interactive TV	
	DISH HOME INTERACTIVE TV	52
	CUSTOMER SERVICE	52

8 Digital Video Recording

WHAT IS DVR?	54
PAUSING A PROGRAM	54
REVERSING, FAST FORWARDING, AND SKIPPING	55
SLOW MOTION AND FRAME-BY-FRAME	55
RECORDING A LIVE PROGRAM	56
PLAYING A RECORDED PROGRAM	56
USING RECORD PLUS	56
RECORDING WHILE WATCHING DIFFERENT PROGRAMS	57
RECORDING OPTIONS	59

9 Record Future Programs

TIMERS AND RECORDINGS	62
USING THE TIMERS LIST	65
USING THE DAILY SCHEDULE	65
SETTING UP AN AUTOMATIC TIMER	66
SETTING UP A MANUAL TIMER	67
SETTING UP A DISH PASS™ TIMER	68
DELETING A TIMER	69

10 Remote Control Setup

IMPROVING RECEIVER CONTROL	72
CONTROLLING OTHER COMPONENTS	75
THE RECOVER BUTTON	82

11 Receiver Customization

USING SHARED VIEW	86
MODULATOR SETUP	86
USING MULTIMEDIA	86
USING CALLER ID	88
CHANGING LANGUAGES	89
USING CLOSED CAPTIONING	90
USING DOLBY® SURROUND SOUND	91
CHANGING THE PROGRAM GUIDE ORDER	92
CHANGING THE GUIDE DISPLAY	92
RESETTING TO FACTORY DEFAULTS	93
SCHEDULING RECEIVER UPDATES	94
INACTIVITY STANDBY	94

12 Connections and Setup

CONNECTING TO THE NEARBY TV (TV1)	98
CONNECTING TO THE REMOTE TVs (TV1 OR TV2)	101
CONNECTING TO YOUR DISH ANTENNA	104
CONNECTING THE PHONE LINE	105
CONNECTING A VCR TO THE REMOTE TV	107
CONNECTING OFF-AIR ANTENNA/CABLE TV	108
USING TROUBLESHOOTING TOOLS	113

Reference

TROUBLESHOOTING TABLES	116
REMOTE CONTROL DEVICE CODES	128

Appendix 131

Index 141




Important Safety Instructions

- 1** Read these instructions.
- 2** Keep these instructions.
- 3** Heed all warnings.
- 4** Follow all instructions.
- 5** Do not use this apparatus near water.
- 6** Clean only with a dry cloth.
- 7** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8** Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9** Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10** Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11** Use only attachments/accessories specified by the manufacturer.
- 12** Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13** Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Note to Satellite TV System Installer: This reminder is provided to call the satellite TV system installer's attention to Article 820-40 of the National Electrical Code (NEC) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

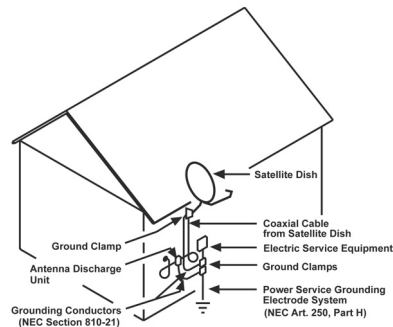

- Operate the receiver using only the type of power source indicated on the marking label. Unplug the receiver power cord by gripping the power plug, not the cord.
- Do not overload wall outlets or extension cords, as this can result in a risk of fire or electrical shock.
- Never insert objects of any kind into the receiver through openings, as the objects may touch dangerous voltage points or short out parts. This could cause fire or electrical shock.
- Do not locate the antenna near overhead light or power circuits, or where it can fall into such power lines or circuits. When installing the antenna, take extreme care to avoid touching such power lines or circuits, as contact with them can be fatal.
- Do not attempt to service the receiver yourself, as opening or removing covers may expose you to dangerous voltage, and will void the Limited Warranty. Refer all servicing to authorized service personnel.

Proper Care of Your Equipment

- Always handle the satellite receiver carefully. Avoid excessive shock and vibration at all times as this can damage the hard drive.
- Unplug the receiver from the AC power outlet before cleaning.
- If you have the receiver turned on and need to move it, be sure to unplug the receiver and let it sit for at least 30 seconds before moving it.
- The use of accessories or attachments not recommended by the receiver manufacturer will void the Limited Warranty.
- Do not place the receiver in an enclosure such as a cabinet without proper ventilation.
- Do not stack the receiver on top of or below other electronic devices as this can cause heat build-up and vibration.
- Do not install the receiver in any area where the temperature can be less than 40°F or more than 113°F. If the receiver is cold to the touch, do not plug it in immediately. Let it sit unplugged at room temperature for at least 45 minutes before plugging it in.
- Use an outlet that contains surge suppression or ground fault protection. For added protection during a lightning storm, or when the receiver is left unattended and unused for long periods of time, unplug the power cord from the wall outlet, disconnect the lines between the receiver and the antenna, and disconnect the telephone line. This will provide some protection against damage caused by lightning or power line surges.



On some TVs, the presence of fixed images for extended periods of time may cause them to be permanently imprinted on the screen. Consult your TV user guide for information on whether this is a problem for your TV, what operating/viewing restrictions apply to avoid this problem, and associated TV warranty coverage.